

For assistance please call the ETS Call Center at (408) 864-TECH (x8324)

8401 Classroom Multimedia Quick Reference

*If the screen is blank, touch to activate.**

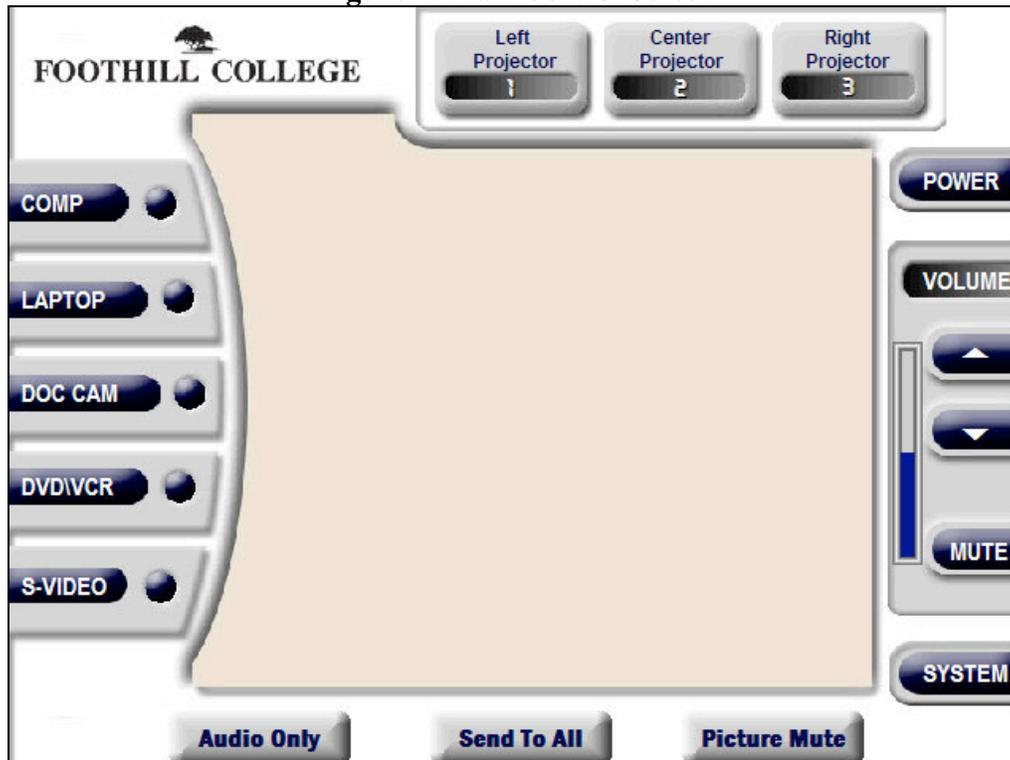


Figure 1: Opening Screen (*power is off*)

Operating Instructions:

1. Touch the “**FOOTHILL COLLEGE**” logo to turn the system on. (*Figure 1*)
2. Select the source device you wish to display on the left side of the panel. (*Figure 2*)
3. Select **LEFT**, **FRONT** or **RIGHT** monitor button(s) to display the selected source on the respective monitor. (Audio is set to last selected source.)
4. Repeat steps 2 and 3 if you wish to display more than source.
5. To turn off the system, press the **POWER** button. Select **YES** to confirm

Figure 2: Main Control Screen



- To control the **DVD\VCR**, select the device and the controls will appear.
- The **DVD\VCR** is located in the equipment compartment in the console.
- The **Laptop** input is located on the instructor console.