


Chinese Heritage Room Multimedia Quick Reference

If the screen is blank, touch to activate.*



Figure 1: Opening Screen (power is off)

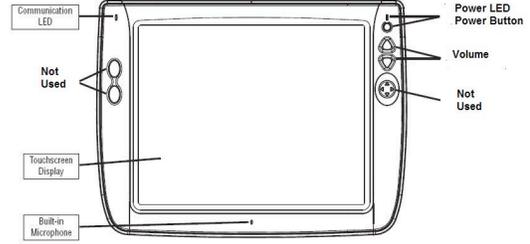


*If the screen stays blank when touched, check the power LED in the upper right corner. The power button is located below the LED.

Operating Instructions:

1. Touch the “**FOOTHILL COLLEGE**” logo to turn the system on. (Figure 1)
2. Select the source device you wish to display on the left side of the panel. (Figure 2)
3. Select **LEFT**, **FRONT** or **RIGHT** monitor button(s) to display the selected source on the respective monitor. (Select “**Send to All Displays**” for all three monitors).
4. Repeat steps 2 and 3 if you wish to display more than source.
5. To change the audio source, select a source device and press **Audio Only**.
6. To turn off the system, press the **POWER** button. Select **YES** to confirm.

Figure 2: Main Control Screen (power is on)

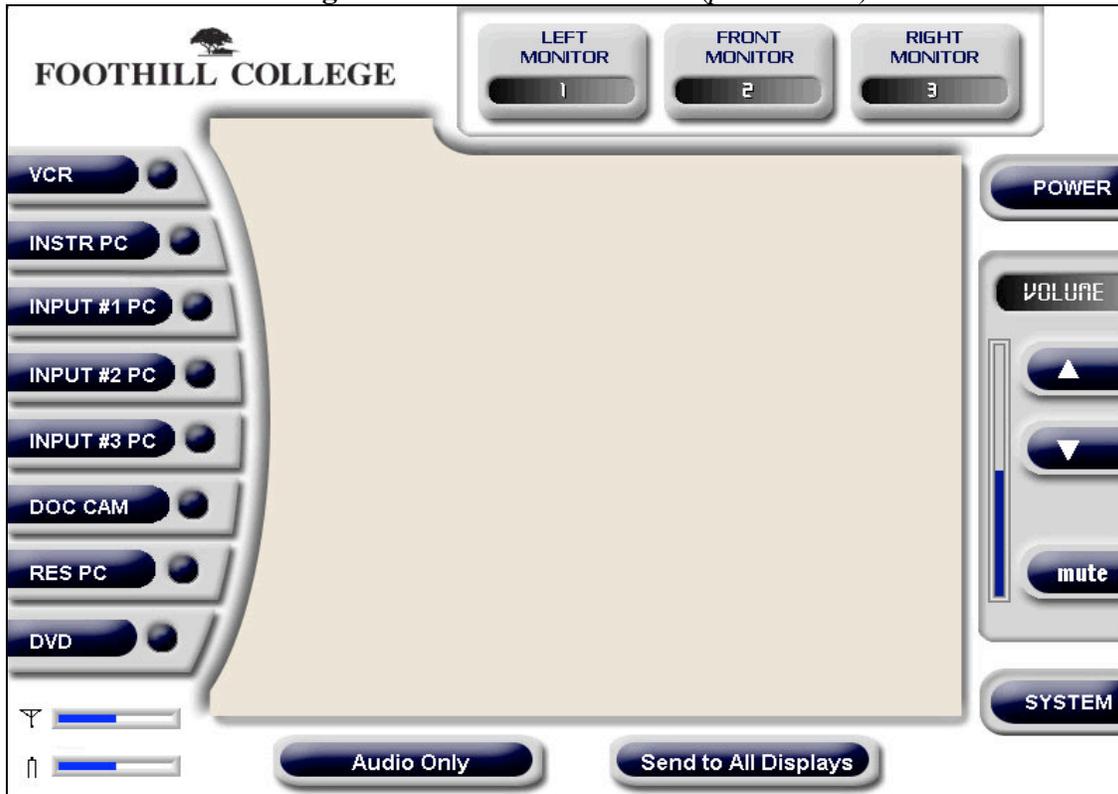

- To control the **DVD** or **VCR**, select the device and the controls will appear.
- The **DVD**, **VCR** and **RESident PC** are located in the equipment closet.
- **PC Inputs 1, 2 & 3** are labeled and located below the plasma displays.
- The **DOC CAM** (visualizer) input is located next to **PC Input #1** on the left wall.